



## CDK SERIES IMPACT CRUSHERS

		FIRST START-UP	DAILY	WEEKLY	MONTHLY	SEMI- ANNUAL
1	Clean any dirt that has accumulated around the machine.			X		
2	Check the locks on the covers to the drive equipment.	X	X			
3	Check the tightness and firmness of the main frame bolts.	X	X			
4	Check for the presence of abrasion and fracture on the frame liners.	X		X		
5	Check the tension of the V-belts.			X		
6	Check for potential noise on the bearings.				X	
7	Check whether the blow bars are abraded.		X			
8	Check for the tightness of the blow bars.	X	X			
9	Check the condition of adjustment systems.			X		
10	Check the hydraulic equipment and its tightness.	X				X
11	Check the operating temperatures of the bearings.		X			
12	Check the connections and the extent of abrasion to the rotor.		X			
13	Check the condition and spring lengths of the adjustment mechanism.			X		
14	Check for leakages in the hydraulic system.		X			
15	Check the condition of the hydraulic pipes and hoses.			X		
16	Check the functioning of emergency shutdown devices.			X		
17	Lubricate the door and cover hinges.				X	
18	Check the condition of the operating platform, stairs, rails and other safeguards.				X	